
How to Start your E430x

- Before you remove the back cover, make sure the E430x is power off.
- 1. Make the E430x facing down, and then unscrew the screws of E430x.




3. Pull the plastic strap, and then remove the battery.

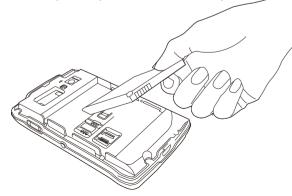


4. Insert the SIM card (with its gold contacts facing down and cut-off corner facing out) all the way into the SIM card slot.


Caution! Please make sure you have removed both the battery and USB cable while inserting SIM card.

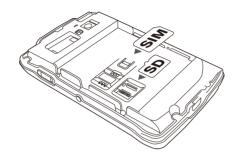


5. Push the metal cover backward and lift the metal cover. Then put the SD card into the socket, close the metal cover and push forward till click sound.

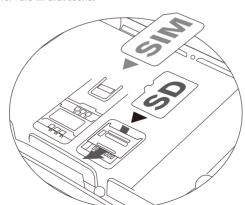

6. Reinsert the battery.

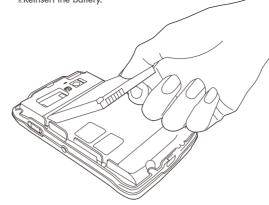


7. Fix the back cover with screws,

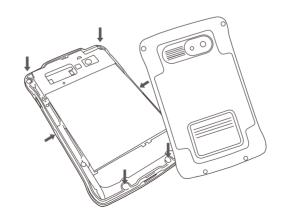

8.Use the bundled power adapter and USB cable to charge E430x for 4hrs.



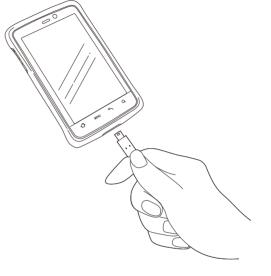

E430x

Quick Start Guide v1.0

For the complete user manual and other helpful resources, go to Winmate website

www.winmate.com.tw

Before starting to use E430x

1)Charge the Battery

The battery in your new E430x series device is not charged yet. Please charge with the bundled USB cable before your first use.

Caution! Please don't remove the battery pack or try to take this PDA apart while the E430x is charging. These actions will result in some damages and may invalidate your warranty.

2)Select the RF functions that you want

E430x Series can support diverse Internet bandwidth quickly. Using data services while roaming will be costly. Before using E430x series products supporting 3G function, we strongly recommend that you double check your current data plan or call your mobile operator for your data rates.

3)Some important legal information to E430x user

To the maximum extent permitted by applicable law, in no event shall Winmate or its affiliates be liable to you, any user, or third party for any indirect, special, consequential, incidental or punitive damages of any kind, arising in contract, tort, or otherwise, including, but not limited to, injury, loss of revenue, loss of goodwill, loss of business opportunity, loss of data, and/or loss of profits, regardless of the foresee ability thereof or whether Winmate or its affiliates have been advised of the possibility of such damages. And in no event shall the total liability of Winmate or its affiliates exceed the amount received from you, regardless of the legal theory under which the cause of action is brought. The

foregoing does not affect any statutory rights which may not be disclaimed.

Note:Certain apps and features may not be available in all countries.

To know your E430x more

Front View



Back View



There's more help, more accessories, and more free stuff.

 Keep your E430x updated, and find the latest PC software, user manual, online help and more at:

http://www.winmate.com.tw/TabletPC/rugged_tablet_4.3handhel d.htm?showblock=Support

• Find more accessories for your E430x at:

http://www.winmate.com.tw/TabletPC/rugged_tablet_4.3handhel d.htm?showblock=Accessories

 For more news, tips, videos, and so much more – go to Winmate website:

http://www.winmate.com.tw

