


SB600-C

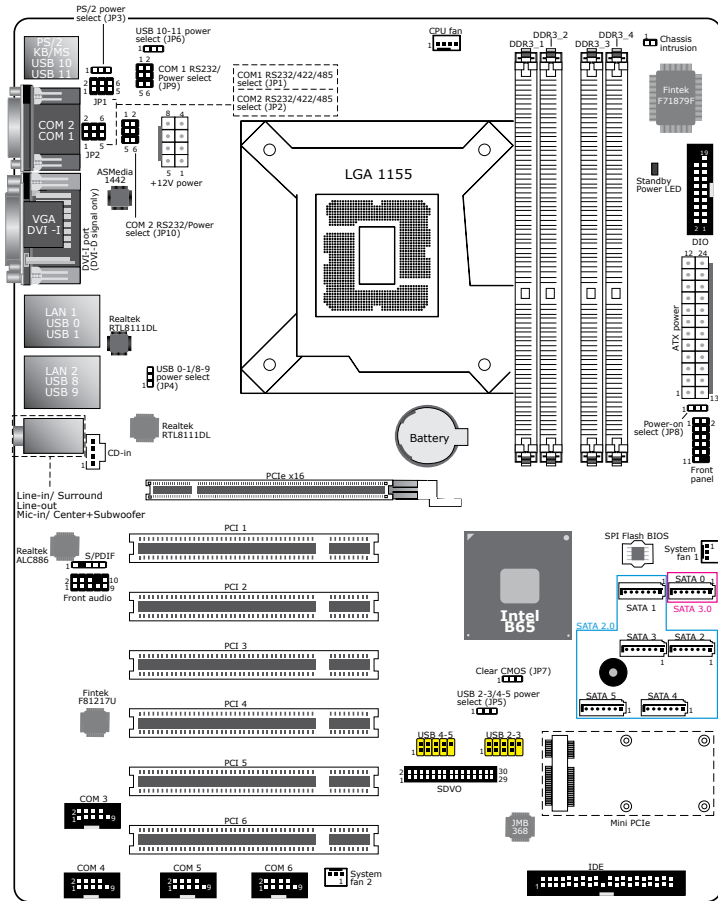

USB Power: 0-1/8-9 (JP4), 2-3/4-5 (JP5), 10-11 (JP6)	
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/RS422/RS485 Select: COM 1 (JP1), COM 2 (JP2)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

Power-on Select	JP8
Power-on via power button (default)	1-2 On
Power-on via AC power; Power-on via WOL After G3	2-3 On

Clear CMOS Data		JP7
Normal (default)	1-2 On	
Clear CMOS Data	2-3 On	

PS/2 Power		JP3
+5V (default)	1-2 On	
+5V_standby and supports PS/2 keyboard/ mouse auto swap function	2-3 On	

RS232/Power: COM 1 (JP9), COM 2 (JP10)		
RS232 (default)	1-3 (RI), 2-4 (DCD)	On
RS232 with power	3-5 (+5V), 4-6 (+12V)	On

Note: The SDVO connector supports the optional SDVO-LVDS daughterboard.